

### 3. Fix Value Test

#### 3.1 Fixed Stop Screen

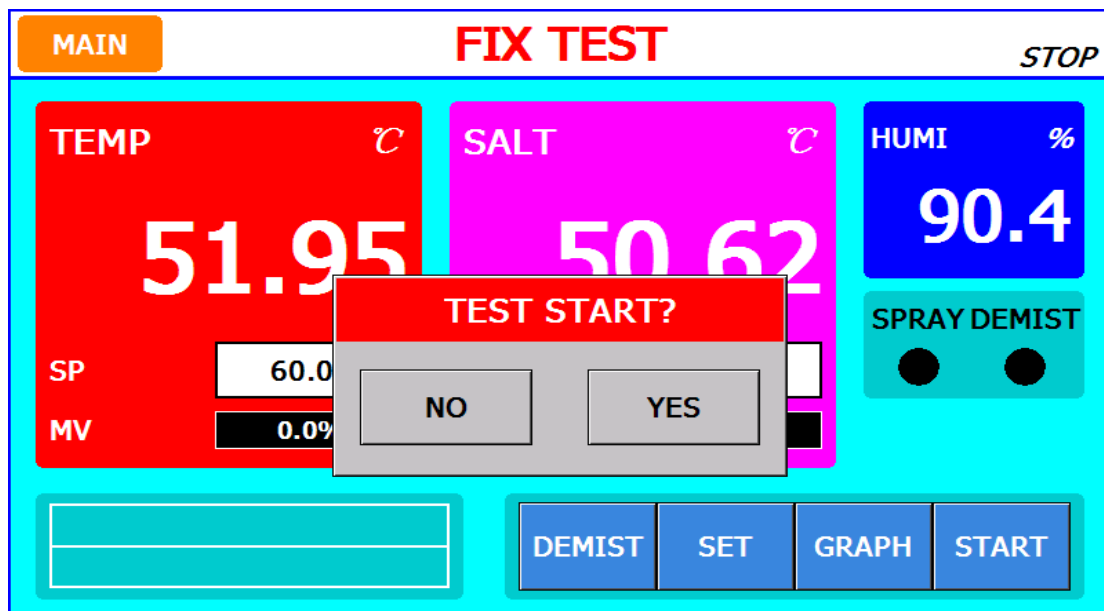
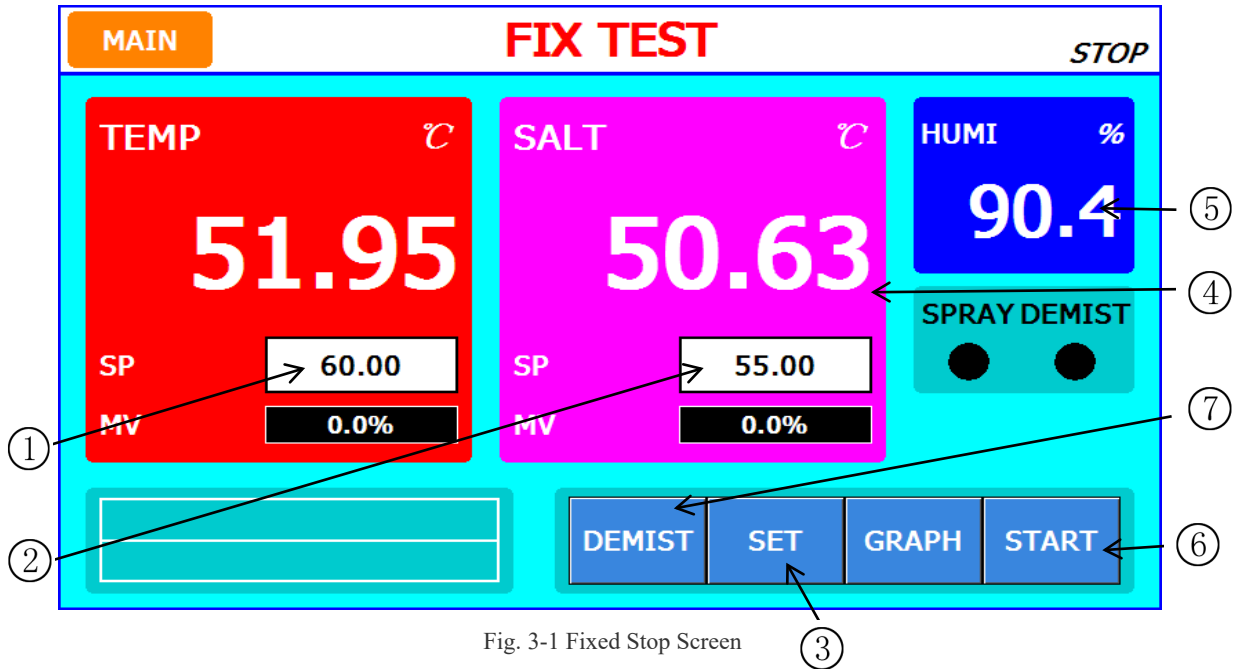


Figure 3-2 Fixed Stop-Run Execution Confirmation Screen

NO	Content	Explain	
①	Laboratory Temperature Settings	Display or enter the current temperature setting.	Refer to the 1.1 Settings Input Method to enter the Settings to be run
②	Pressure Barrel Temperature Setting Value	Display or enter the current temperature setting.	
③	Fixed value setting	Setting the Running Information and Status of Set Value	
④	Temperature display value	Display current temperature	
⑤	Humidity display value	Display current humidity	
⑥	Run key	To display the key before running for a fixed value	
⑦	Fogging key	Set a fixed value to run or stop, whether to exhaust fog	

### 3.2 Fixed Value Running Screen

► The fixed value running screen is shown in the following figure.

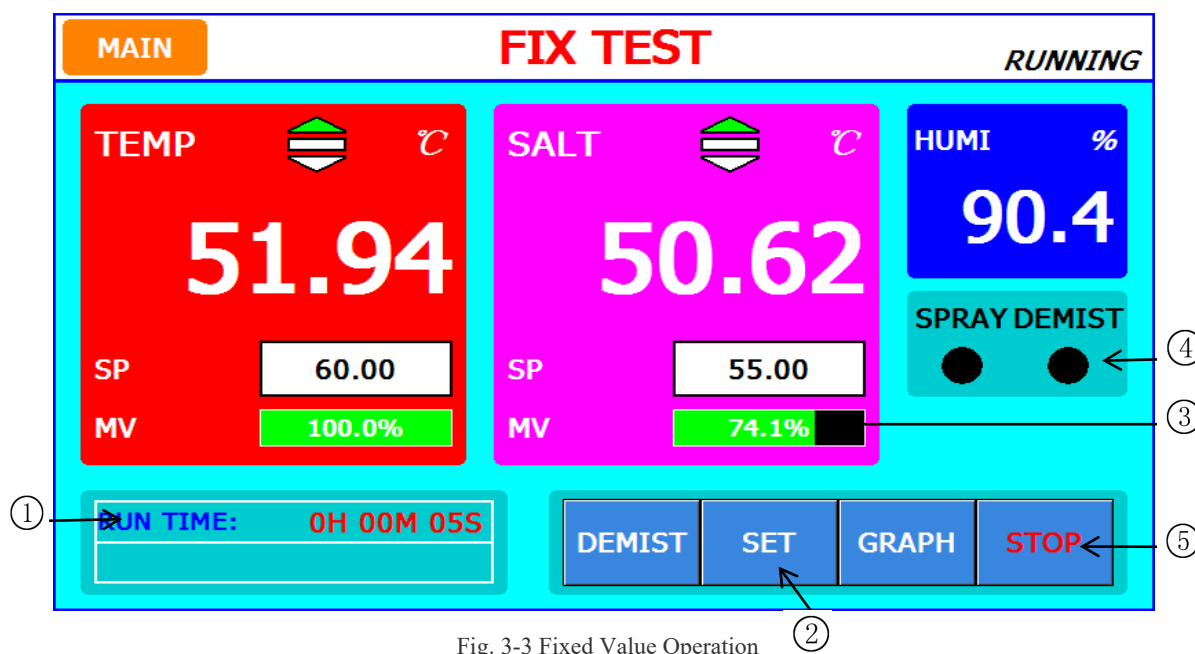


Fig. 3-3 Fixed Value Operation ②

NO	Content	Explain	Remarks
①	Running time	Display the current run time	-----
②	Setting key	Click the settings button and manually spray.	When spraying, red spray will appear.
③	Temperature output	Display current temperature settings and output status	-----
④	Exhaust fog	Press this button to determine whether to start defogging when running or stopping.	When discharging fog, the words "red discharging fog" will appear.
⑤	Stop key	Press this key to stop running at a fixed value.	-----