

4. Parameter Setting for Fixed Value Test

Click the Settings button on the Settings Running Screen to enter the Parameters Settings Screen

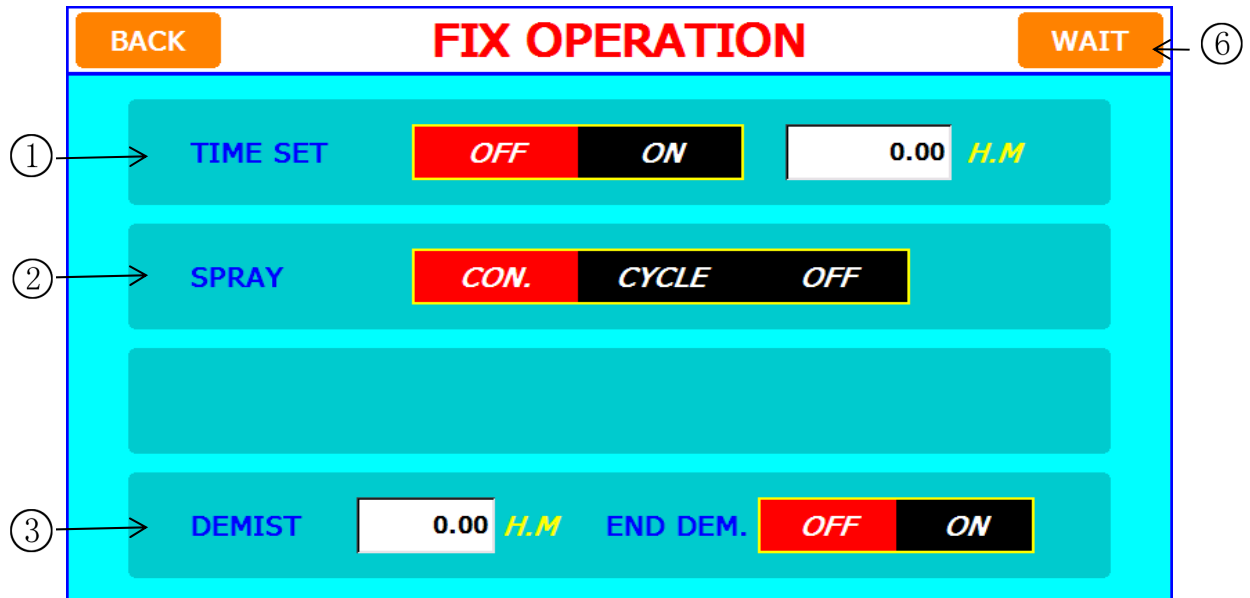


Figure 4-1 Fixed Value Settings

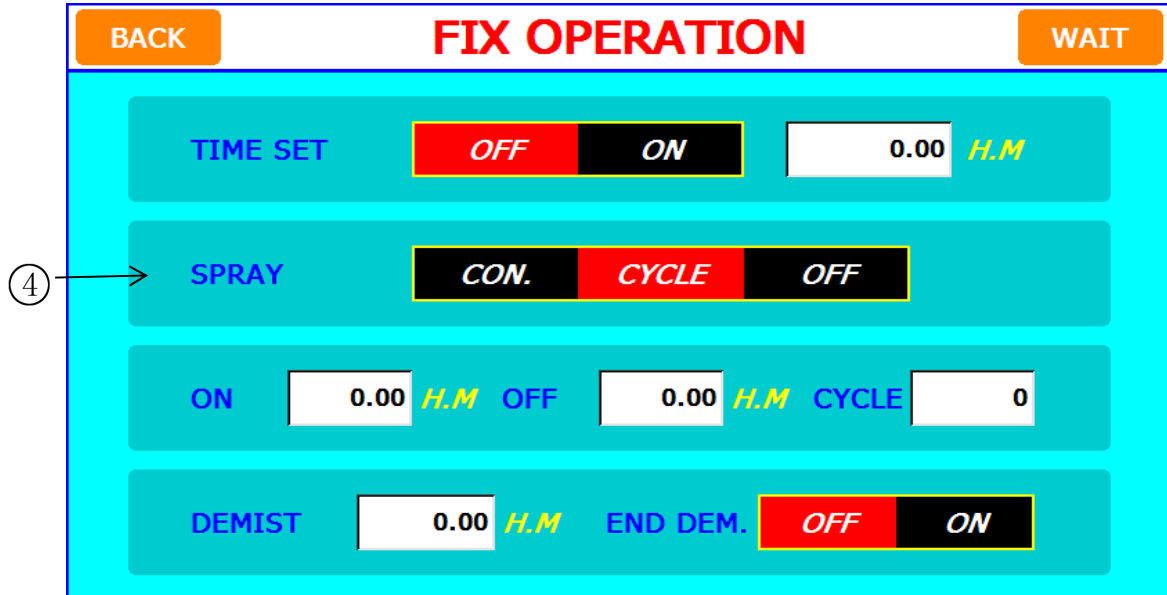


Figure 4-1 Fixed Value Settings

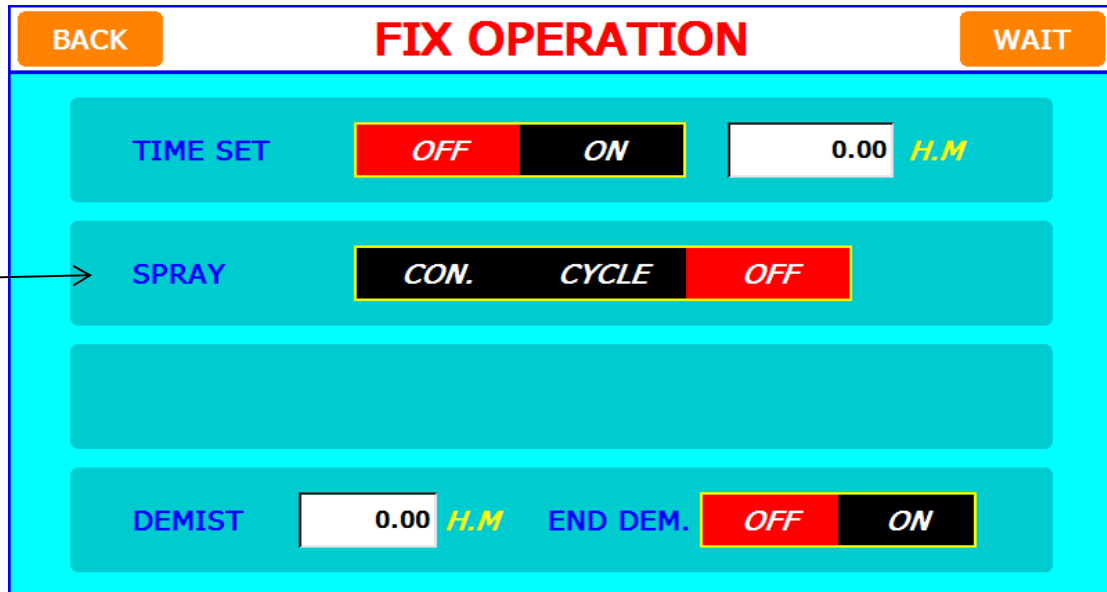


Figure 4-1 Fixed Value Settings

NO	Content	Explain	
①	Timing time	Set the run time of the set value to close or open (OFF, ON)	Close: Stop running at a fixed value only by stopping the key. Open: Setting time will stop automatically.
②	Continuous spray	Set up continuous spray operation time (minutes)	After the set time, the spray operation stops automatically
③	Fogging time	Setting time for fog removal	
④	Periodic spray	Periodic actions can be set by spraying time, stopping time and circulation.	
⑤	Manual	It can be stopped or sprayed manually.	
⑥	Standby settings	Setting up the shutdown and opening of standby operation	